


Quick Guide

ZM-VE200SE

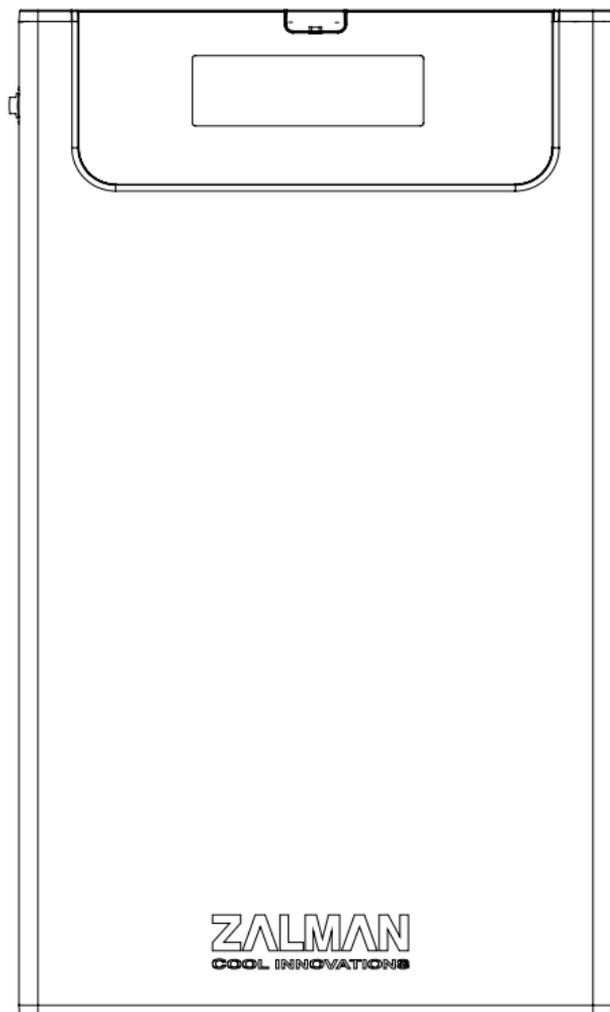

Please read this Manual before use

1. Precautions

We are not responsible for any damages due to improper use.

Product design and specifications may be revised to improve quality and performance.

Avoid inserting any foreign objects into the device.

Keep device away from heat sources, direct sunlight, oil, and humid environment.

Do not let the device be wet. It may not be covered by Warranty.

It may have problem if used near magnetic objects.

Exterior damage during use is not covered by Warranty.

2. Specifications


Spec. / Model	ZM-VE200SE
Case Material	Aluminum Alloy, Acryl, Poly Carbonate
Weight	98.5g
Dimensions	135.3(L) × 78.6(W) × 13.1(H)
Interface	USB 2.0 / e-SATA

3. System Requirements

CPU: Intel Pentium / 350 Mhz or above compatible CPU

O.S: Windows XP SP3 or above / Mac OS X 10.0 or above


4. Components

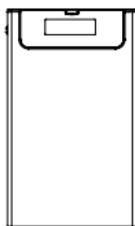

ZM-VE200



Pouch

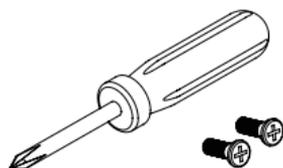

Screw Driver & Bolts 2pcs




Quick Guide




USB 2.0 Cable

5. Mounting a 2.5" HDD


1

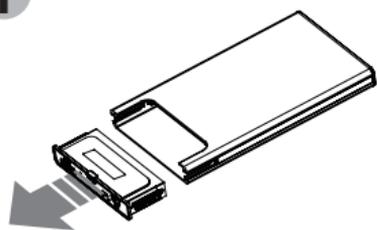


2

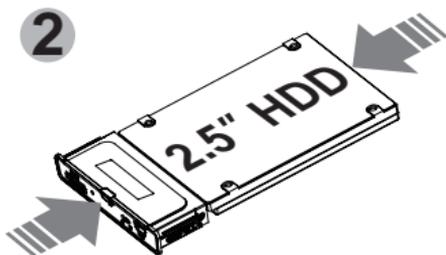

3

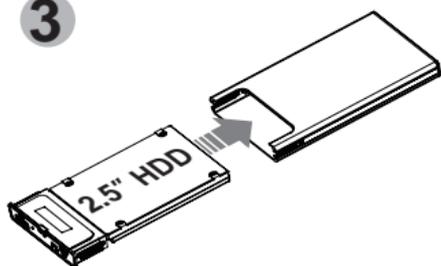


4

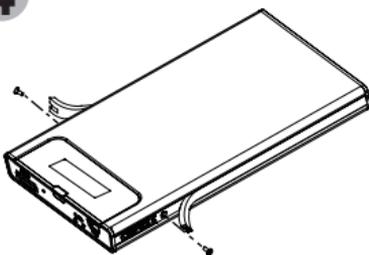

6. Names of Parts

(1) Appearances

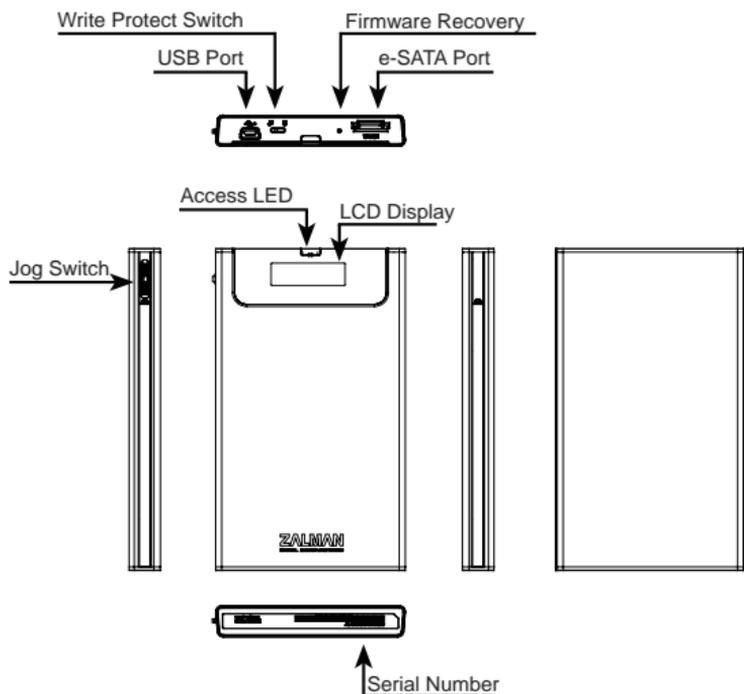




Caution

This device supports Hot Swap using e-SATA. To use Hot Swap function, please check in advance if PC motherboard supports Hot Swap function.
 Connect e-SATA cable first, then USB cable. (When removing, use reverse order.)
 If cable is unplugged with force while operating, it may cause fatal error to the system and device.


8. Introduction

(1) Using Jog Switch

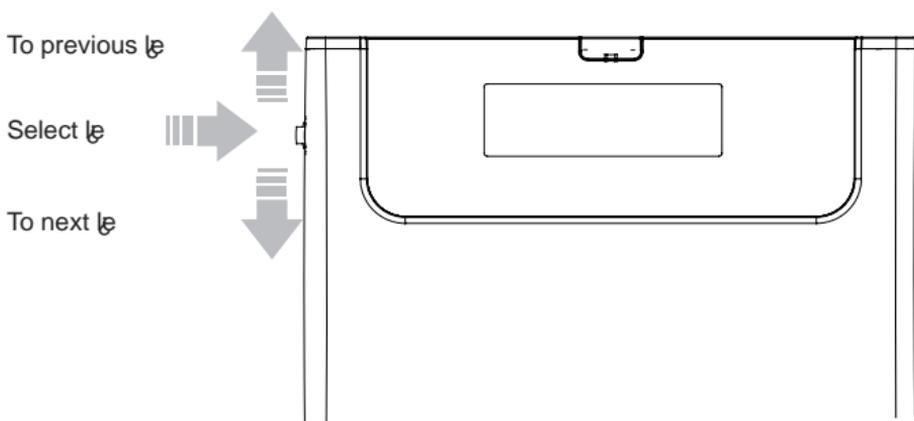

(2) Menu Navigation

Desired mode is set after waiting 3 seconds

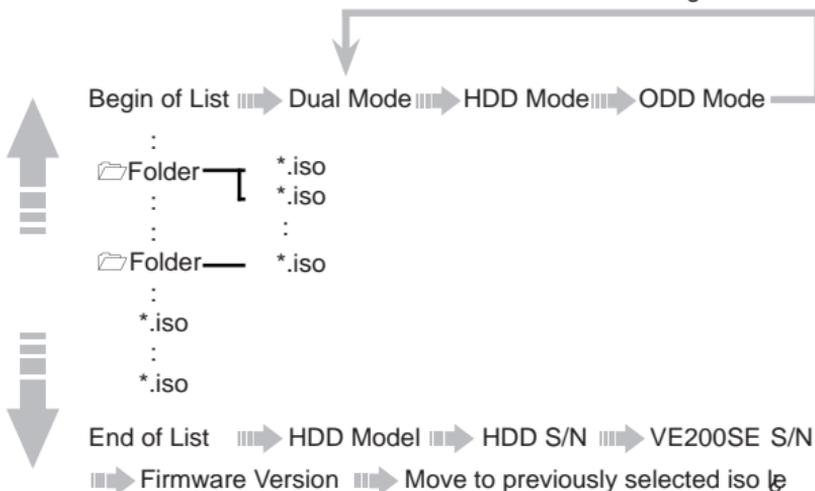

Caution

To use Virtual ODD, iso file must be located in the "_iso" folder of device.

MEMO
